



The Invisiware® Radius Ferrule is designed to be hidden within the end post. Only the head will be exposed outside of the post. The head area is a dome-shaped end that is larger than the body of the ferrule and acts as a shoulder to support the tension of the cable. The Radius Ferrule is swaged onto the end of the cable. It is not an adjuster. An Invisiware® Receiver or Adjust-A-Jaw Tensioner should be used on the other end for adjustment.

Pipe end posts are counterbored to receive the head and to minimize its exposure on the outside of the post. On flat-sided end posts, the head rests flush against the surface of the post.

We include a plastic washer to act as a scratch resistant barrier between the head of the radius ferrule and the surface of the post.

*NOTE: This part is designed for use on pipe and square tube railing only. It should not be specified for 3" x 1" and 2" x 1" double end post construction railings.*



Invisiware® Radius Ferrule Type 316 Stainless Steel					
Cable Dia.	D Diameter (After Swaged)	L Length Swaged	S Head Diameter	A Shoulder Diameter	Part Number
1/8"	.250"	.750"	.537"	.437"	20FRF4
3/16"	.250"	.750"	.537"	.437"	20FRF6
1/4"	.375"	1.000"	.646"	.531"	20FRF8
5/16"	.500"	1.000"	.865"	.687"	20FRF10
3/8"	.500"	1.000"	.865"	.687"	20FRF12

# HOW IT WORKS

