




## Swage to Swage Turnbuckles

For longer cable runs or simply to establish a certain look, swage to swage cables can be used. Swage to swage turnbuckles can be used in the middle of or anywhere along a cable run for look as well as functionality. They can be used to extend a cable run to any length by spacing them along the cable approximately 25' to 35' apart. Swage to swage turnbuckles can be used in combination with any termination style fittings. (316 grade stainless steel for superior corrosion resistance).

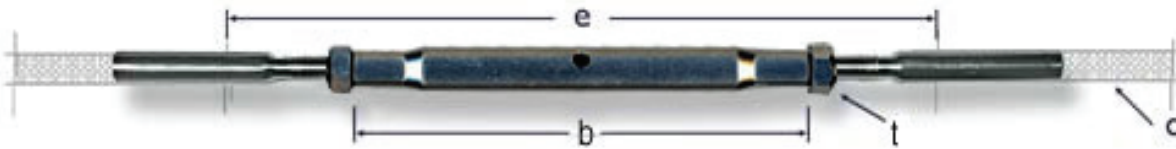

Swage to Swage Turnbuckles					
Cable Size (c)	Thread (t)	Body L (b)	Open L (e)	Closed L (e)	Part #
1/8"	10-32	3-1/2"	6-1/2"	4-1/2"	10A40300
1/8"	1/4-28	4-1/4"	8"	5"	10A40302
5/32"	1/4-28	4-1/4"	8-1/4"	5-1/2"	10A50302
3/16"	1/4-28	4-1/4"	8-1/4"	5-1/2"	10A60302
3/16"	5/16-24	4-3/4"	8-3/4"	6"	10A60304
1/4"	5/16-24	4-3/4"	9-1/2"	6-1/4"	10A80302
1/4"	3/8-24	5-1/4"	9-1/2"	6-1/2"	10A80304

## Post Hole Requirements

Your holes should be drilled to these diameters to allow clearance for our hardware.

Post Hole Requirements	
Cable Size	Drill Hole to a Diameter of...
1/8"	1/4"
5/32"	9/32"
3/16"	11/32"
1/4"	15/32"